




AC **14-AMP** 

18" ELECTRIC SNOW BLOWER

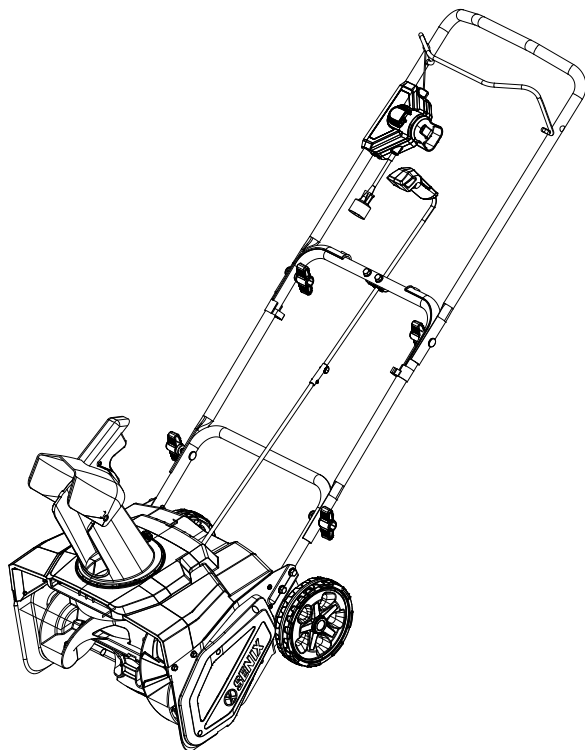

CAUTION: Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call 1-800-261-3981 or email us at senix.support@yatusa.com

TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT.....	7
SPECIFICATIONS.....	8
ASSEMBLY.....	8
OPERATION.....	10
MAINTENANCE.....	13
TROUBLESHOOTING.....	17
WARRANTY.....	18

SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes safety symbols that may appear on this product. Read, understand and follow all instructions on the machine before attempting to assemble and operate.



READ THE OPERATOR'S MANUAL(S) - Read, understand and follow all instructions in the user manual(s) before attempting to assemble and operate.



SAFETY ALERT - Indicates a precaution, a warning or a danger.



Wear hearing protection. Wear eye protection. Wear breathing protection.

Keep the flexible power supplycord away from the cutting blades.



Keep hands, feet and clothing away from the rotating auger to avoid injury.



Wear protective gloves and non-slip footwear when using the machine and handling debris.



Do not use hands to unclog chute.



WARNING! Turn the machine OFF and disconnect it from the power supply before inspecting, cleaning, changing accessories, or conducting any other maintenance task.



WARNING! Do not expose the unit to rain or wet conditions. Keep dry.



DANGER! Cutting/dismemberment hazard - Keep feet away from the rotating auger.



CAUTION! Beware of stones and other foreign objects that could be thrown from the equipment.



Keep bystanders and children a safe distance (at least 33 ft/10 m) away from the work area.



Always keep the power cable away from heat sources, oils or sharp edges. Immediately remove plug from the mains if the cable is damaged or entangled.



DANGER! Cutting/dismemberment hazard - Keep hands away from the rotating auger. Do not use hands to unclog rotor housing. Stop motor before removing debris.



The rotating part will continuously run for several seconds after you turn off the machine.



Double insulation.



Complies with ETL standards.

SAFETY INSTRUCTIONS

ALL OPERATORS MUST READ THESE INSTRUCTIONS BEFORE USE

Any electrical equipment can be dangerous if used incorrectly. Some of the safety precautions given in this manual apply generally to many equipments. Other warnings are specific to the use of this snow blower. Keep this manual for future reference.

GENERAL SAFETY WARNINGS

You and any other operator of this snow blower must read, understand and follow these instructions in their entirety, and should reread them at the start of each snow season. Failure to follow these instructions may result in **ELECTRIC SHOCK**, **FIRE** and/or serious **PERSONAL INJURY**.



Notice the personal safety alert symbol used in this manual to draw your attention to a WARNING given along with the particular operating instruction. This means that the operation requires special ATTENTION, CAUTION, and AWARENESS.

- **Keep work area clean and well lit** – Cluttered, dark areas invite accidents.
- **Do not operate the snow blower in an explosive atmosphere**, such as in the presence of flammable liquids, gases or dust. Electrical equipments create sparks that may ignite the dust or fumes.
- **Keep children, pets and bystanders away from the work area.** Be aware that the normal noise of the machine when turned on may make it difficult for you to hear approaching people. Spectators should wear safety glasses and be kept a safe distance away from the work area. Do not let spectators touch the snow blower or the extension cord.
- **Electrical plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with grounded equipments. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces** (i.e. upper and lower water pipes, radiators, ranges, refrigerators, microwave ovens and outer frames of heating equipment). Take necessary precautions to avoid electric shock. There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not abuse the cord.** Keep the cord away from heat, oil, sharp edges or moving parts. Never carry the snow blower by its cord or yank the cord to disconnect it from the electrical outlet. Damaged or entangled cords increase the risk of electric shock.
- **Replace or properly repair damaged cords.** If the cord becomes damaged in any manner while plugged into the wall receptacle, immediately pull the extension cord plug from the receptacle.
- **Contact with water while operating the snow blower can result in electric shock and serious body injury.** Do not use the snow blower in damp or wet locations or expose to rain. Do not handle the plug or the equipment with wet hands or while standing in water.
- **Turn off the power switch and disconnect the power cable before making any adjustments to the unit and before inspecting, servicing, changing accessories or cleaning the snow blower. Follow the same procedure if any other dangerous conditions are present during operation.** Any adjustments to the unit should be performed after revolving parts inside the snow blower stop completely. Such preventative safety measures reduce the risk of starting the power tool accidentally.
- **If you find the main power cable or the extension cable damaged, please pull out the plug from the socket and disconnect the power immediately.** Repair the cable or replace it if necessary.
- **When replacing any parts, you must strictly observe the instructions and procedures described in this operator's manual.** Special care should be paid to any rubber parts, since these parts may increase the engine load and decrease its mechanical power if damaged.
- **Do not move or transport the snow blower when the plug is connected to the power socket and the switch is turned on.**

ELECTRICAL SAFETY

- 1. Ground fault circuit interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the snow blower. Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
- 2. To prevent electric shock, use only with an extension cord suitable for outdoor use. Before use, check that the extension cord is in good condition. When using an extension cord, make sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.
- 3. To reduce the risk of electric shock, this equipment has a polarized plug (i.e. one blade is wider than the other). Use this equipment only with a polarized UL-, CSA- or ETL-rated extension cord for outdoor, all-weather use. The equipment plug will fit into a polarized extension cord only one way.

If the equipment plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. The extension cord plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the proper wall outlet. Do not modify the equipment plug, extension cord receptacle or extension cord plug in any way.



WARNING:

ELECTRIC SHOCK MAY CAUSE SEVERE INJURY OR DEATH. HEED THESE WARNINGS:


- Do not allow any part of the electric snow blower to make contact with water while it is in operation. If the equipment becomes wet while turned off, wipe dry before starting.
- Use only a UL-, CSA- or ETL-rated extension cord for outdoor, all-weather use.

- Do not use an extension cord over 100 ft (30 m).
- Do not touch the equipment or its plug with wet hands or while standing in water. Wearing rubber boots offers some protection.

EXTENSION CORD CHART		
Cord Length:	Up to 50 ft (15 m)	+50 ft - 100 ft (+15 m - 30 m)
Min. Wire Gauge (A.W.G.):	14	12

- 4. To prevent the equipment cord from disconnecting from the extension cord during operation, make a knot with the two cords as shown in Table 1.

Table 1. Method of Securing Extension Cord

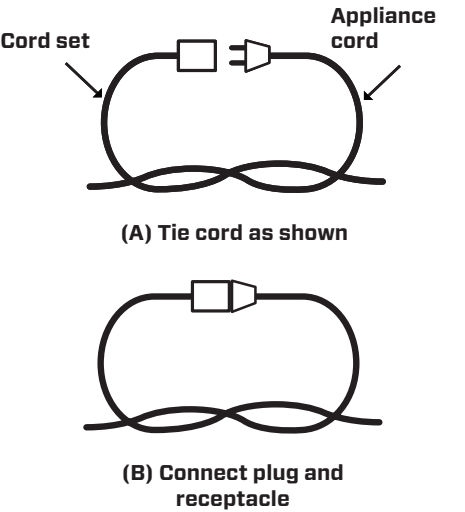

- 5. Do not abuse the cord. Never pull the snow blower by the cord or yank the cord to disconnect it from the receptacle. Keep the cord away from heat, oil, and sharp edges.

PERSONAL SAFETY

- 1. **Stay alert** - Watch what you are doing and use common sense when operating the snow blower. Do not use the machine when tired, ill or under the influence of

drugs, alcohol or medication. A moment of inattention may result in serious personal injury.

2. **Wear proper clothing** – Wearing rubber boots offers additional protection from electric shock. Do not wear loose clothing or jewelry that may become caught in the machine. Wear protective headgear to keep hair away from revolving parts of the machine. Safety glasses offer better protection than everyday eyeglasses.
3. **Moving parts present risks** – Keep your face, hair, clothing, hands and feet away from moving parts. All guards and safety attachments must be installed properly before using the unit. Shut off and disconnect the cord before touching any parts other than the handles and the switch.
4. **Surfaces** – This snow blower is intended for use on paved surfaces. Do not use on gravel, stone or other unpaved surfaces unless the snow blower is adjusted for such surfaces according to the instructions given in this operator's manual.
5. **Avoid accidental starting** – Make sure the switch is in the off position before plugging in the unit. Do not carry the snow blower with your finger on the switch.
6. **Body position** – Maintain proper footing and balance at all times. Place heels firmly on the ground and tightly grasp the handle bar. Watch for uneven surfaces and do not overreach. In case you fall or collide with the snow blower, inspect the unit for any damages or cracks. When stepping backwards, be careful to avoid obstacles beneath your feet or behind you to avoid falling.
7. **If the snow blower strikes any object, immediately stop the snow blower, then inspect for damage** – Repair any damage before restarting and operating the snow blower.

SAFETY INSTRUCTIONS FOR WALK-BEHIND SNOW BLOWERS

- **Read the operator's manual carefully** – Learn your snow blower's applications and limitations as well as the specific potential hazards related to this machine. Do not use this machine for any purpose other than

the one for which it was designed. Failure to adhere to these precautions may cause mechanical defaults, serious damage, or personal injury.

- **Preliminary unit inspection** – Thoroughly inspect the unit before use. Make sure all the parts are secure and installed correctly. If you notice any abnormalities, do not use the machine until it has been properly repaired. Always perform a test run the first time you use the snow blower or after replacing parts to ensure that the unit is functioning properly.
- **Preliminary area inspection** – Clear the area to be plowed before each use. Remove all objects such as rocks, broken glass, nails, wire, or string, which can be thrown by or become entangled in the snow blower. Keep the area of operation clear of all persons, children, and pets.
- **Excessive force** – The snow blower was designed to respond at a certain rate for various snow conditions for optimum safety and performance. Do not force it; keep pressure constant.
- **Malfunctioning switch** – Do not use the snow blower if the switch does not turn it on and off. Any equipment that cannot be controlled by the switch is not safe to use and must be repaired.
- **Hitting an object** – If the snow blower accidentally strikes an object, first stop the snow blower and unplug the unit; next, inspect for damage; finally, repair or replace any damaged part before restarting and operating the snow blower.
- **Discharge chute safety** – Never direct the snow discharge chute at the operator, at bystanders, at vehicles, or at windows. The discharged snow, which may contain foreign objects accidentally picked up by the snow blower, can cause serious damage and personal injury. Do not use your hands to unclog the discharge chute. Stop the motor before removing debris.
- **Hand-held operating position** – Operation of the snow blower in the hand-held position is unsafe.
- **Noise control** – When using the snow blower, respect the local laws and regulations regarding noise control and environmental protection. To avoid noise disturbance, you should carefully decide upon an appropriate operation time and consider the surrounding conditions.
- **When work is completed** – Disconnect the

snow blower from the power source when not in use, when changing accessories, and before performing any maintenance task.


- **Store safely** – Store the snow blower indoors in a dry area between uses. Keep in a locked area, where children and unauthorized users cannot gain access. Do not store the machine while it is still connected to the power source. It may cause damage and injury.
- **Maintain for safety and longevity** – Check for misalignment or binding of moving parts, breakage of parts, and any other conditions that may affect the unit's operation. If damaged, repair or replace the damaged part before use. Use only those replacement parts made for your model. When replacing any parts, you must strictly observe the instructions and procedures described in this manual. Special care should be paid to any rubber parts, since these parts may increase the engine load and decrease its mechanical power if damaged. Always check that all bolts, nuts and knobs are tight before using the snow blower!

SAVE THESE INSTRUCTIONS

INTENDED USE

This corded snow blower is intended for removing and clearing away snow from pavements, gardens, driveways and other groundlevel surfaces. Do not use it for other purposes.

KNOW YOUR UNIT

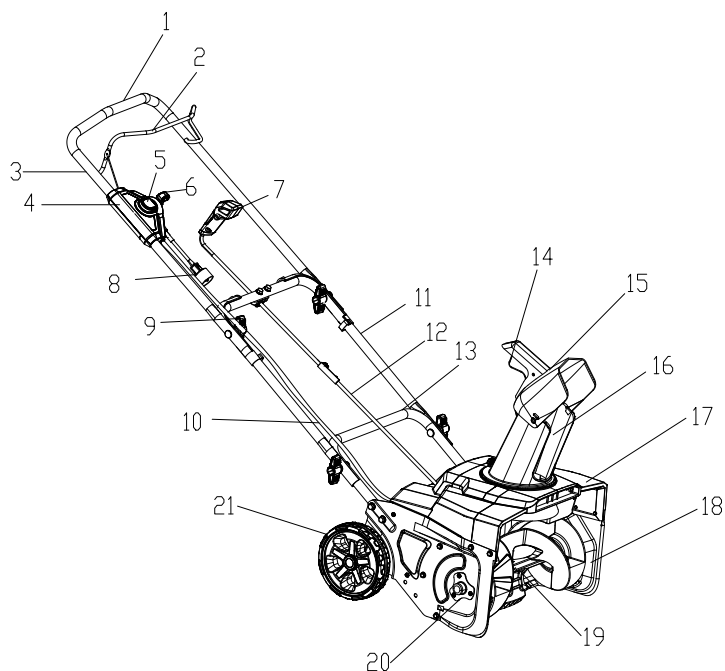

APPLICATIONS

Model: STE14-M

As a corded snow blower, removing and clearing away snow from surfaces.

1	Handle protector
2	ON/OFF switch lever
3	Upper handle
4	Switch box
5	Safety switch button
6	Cord restraint hook
7	Control rod handle
8	Plug
9	Knob
10	Cord

11	Middle handle
12	Chute control rod
13	Lower handle
14	Trigger
15	Chute deflector
16	Discharge chute
17	Snow scraper cover
18	Iron bracket
19	Auger
20	Cover
21	Wheel assembly

SPECIFICATIONS

Model	STE14-M
Voltage	120V-60Hz
Rated Output	14 Ah
No Load Speed	0-3 000 RPM
Clearing Width	18"
Depth of Snow Cut	8"
Throw Distance (Max.)	20' - 33'
Clearing Capacity (Max.)	500 lbs/min
Weight (Only Tool)	30.8 lbs

ASSEMBLY



NOTE:

If the packaging on the box indicates that this tool doesn't include a battery or charger, this manual does not guarantee its presence. The information shown here is merely provided as a reference for use.

1. Unpack all parts and lay them on a flat, stable surface:
2. Remove all packing materials and shipping devices, if applicable.
3. The scope of delivery varies depending on the country and purchased variant:
 - Square neck bolt x4
 - Handle knob x4
 - Discharge chute knob x1
 - Retaining bolt X1

- Wire clip x2
 - Middle handle x1
 - Upper control rod x1
 - Lower control rod x1
 - Discharge chute x1
 - Snow blower x1
 - Instruction manual x1
4. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
 5. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING:



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling. Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!



WARNING:

To avoid product damage or personal injury, the equipment should be assembled indoors at an ambient temperature above 23°F (-5°C).

ASSEMBLING

For easy assembly, the snow blower comes equipped with most of the parts already connected. In just a few simple steps, your snow blower will be ready to go.

1. Secure the connection of the middle handle assembly to the lower handle using 2 handle knobs and 2 bolts and tighten them on each side.

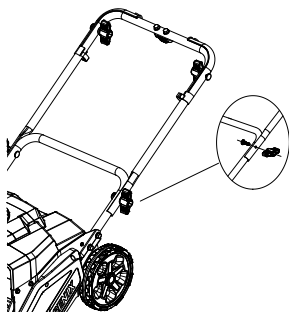


Fig. 1

2. Secure the connection of the middle handle assembly to the upper handle using 2 handle knobs and 2 bolts and tighten them on each side.

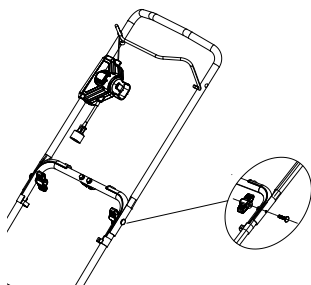


Fig. 2

3. Align the pilot hole "I" on the discharge chute with the sign "C" on the chute housing. Rotate the discharge chute in the direction indicated by the arrow on the chute housing until it is aligned with the sign "C". Push the discharge chute into position and tighten the discharge chute screws to lock the discharge chute.

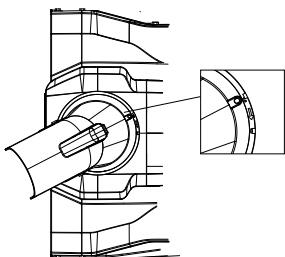


Fig. 3

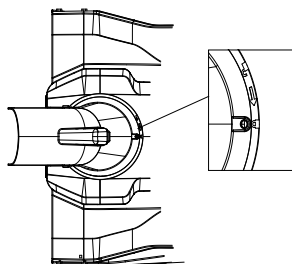


Fig. 4

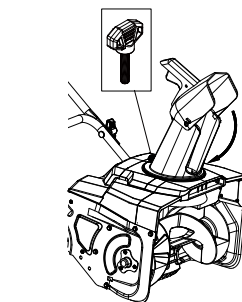


Fig. 5

4. Insert the lower control rod into the hole in the back of the housing firmly until it snaps into place.

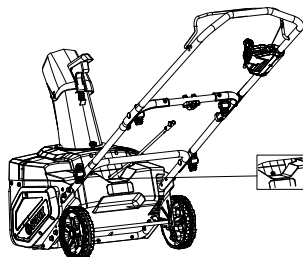


Fig. 6

5. Ensure that the handle of the chute control rod points upward. Insert the upper control rod through the hole in the bracket attached to the middle handle and connect the upper control rod with the lower by using a retaining bolt. Make sure the bolt is tightened as shown so that the upper and the lower control rod are connected firmly.

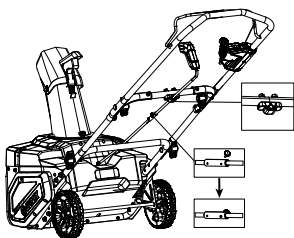


Fig. 7

OPERATION



WARNING:

Keep the area to be cleared free of stones, toys or other foreign objects that the rotor blades might pick up and throw. Such items could be covered by snow and are easy to overlook, so be sure to conduct a thorough inspection of the area before beginning work.



NOTE:

Before using this machine, make sure that the snow blower's roll shaft and rubber plates are firmly secured with screws, and that the rubber plates are facing the correct direction. Perform a test run to ensure that the rotor turns freely.

SECURING THE EXTENSION CORD

1. For safe and efficient use of your snow blower, use only a UL-, CSA- or ETL- rated extension cord recommended for outdoor use. Refer to the Extension Cord Chart.
2. Form a loop with the extension cord and push the loop through the slot on the cord restraint hook. Position the loop over the hook and pull the cable back through the slot. Securing the extension cord in this manner will prevent it from accidentally disconnecting from the power supply during operation.

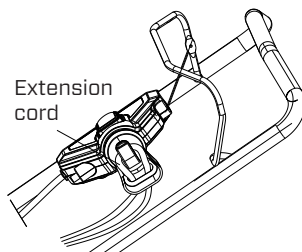


Fig. 8

3. Insert the female end of the extension cord into the equipment's polarized male plug.

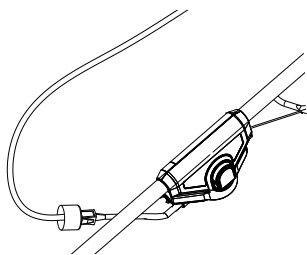


Fig. 9

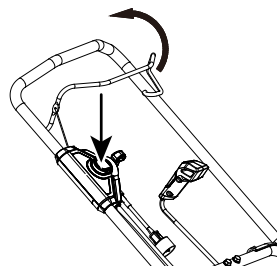


Fig. 11

- Note that the snow blower has a polarized male plug – one prong in the plug is slightly longer and wider than the other. The extension cord female end should be likewise polarized so that the extension cord fits snugly into the equipment plug.

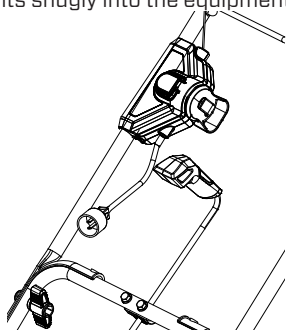


Fig. 10



WARNING:

Damaged electrical cords present risk of fire, electrical shock and serious body injury. Before operating the snow blower, carefully examine the electrical cord. If the cord is damaged, do not use the snow blower. Replace or repair the damaged cord immediately.

POWERING ON AND OFF



WARNING:

The auger starts rotating immediately after the snow blower is switched on. Keep hands and feet away from the auger.

- To switch the snow blower ON, press the safety switch button, then pull the ON/OFF

switch lever toward you.

- Once the machine powers on, release the safety switch button and proceed with operation. The machine can only be started by depressing the safety switch button first, followed by squeezing the ON/OFF switch lever; reverse operation will not start the machine.
- To power off, release your grip on the ON/OFF switch bar lever.

OPERATING TIPS



WARNING:

Foreign objects, such as rocks, broken glass, nails, wire, or string, can be picked up and thrown by the snow blower, causing serious personal injury. Remove all foreign objects from the area to be plowed before operating the snow blower.

- Keep the area of operation free of foreign objects that can become thrown by the rotor blades. Perform a thorough inspection of the area since some objects may be hidden from view by surrounding snow. If the snow blower hits an obstruction or picks up a foreign object during use, stop the snow blower, remove the obstruction, and inspect the unit for damage. Repair or replace any damaged part before restarting and operating the unit.
- Keep children, pets, and bystanders away from the area of operation. Be aware that the normal noise of the machine when turned on may make it difficult for you to hear approaching people.
- When moving the snow blower, use the wheels on one side as the pivot point. Slightly tilt the snow blower on this pivot point to move it forward or backward.

4. Start your clearing path outward, throwing snow in a back and forth motion. To clear in the opposite direction, pivot the snow blower on its wheels. Make sure to overlap clearing paths.
5. Note the wind direction. If possible, move in the same direction as the wind so that the snow is not thrown against the wind (and thus back into your face and on the just cleared path).
6. Do not push the snow blower with excessive force. You should push the machine gently and evenly in accordance with the unit's throw rate.
7. Do not apply additional man-made load to the motor since this may cause motor damage.
8. Some parts of the snow blower may freeze under extreme temperature conditions. Do not attempt to operate the snow blower with frozen parts. If the parts freeze while the snow blower is in use, stop the snow blower and inspect for frozen parts. Free all parts before restarting or operating the snow blower. Never force controls that have frozen.
9. When working on pebbles, gravel, or unpaved surfaces, avoid throwing loose surface material along with the snow by pushing down on the handle to raise the scraper at the base of the unit above the pebbles or gravel.

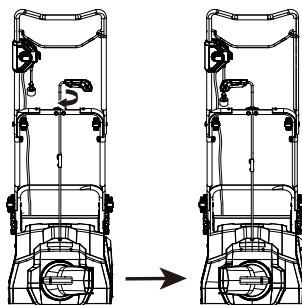


Fig. 12

2. The chute deflector on the top of the discharge chute controls the height of the snow stream. Squeeze the trigger to raise or lower the deflector to the desired height of snow you wish to throw.

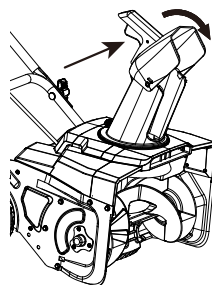


Fig. 13

CHANGING THROW DIRECTION + THROW HEIGHT



WARNING:

Never direct the snow discharge chute at the operator, at bystanders, at vehicles, or at nearby windows. The discharged snow and foreign objects accidentally picked up and thrown by the snow blower can cause serious damage and personal injury. Always orient the discharge chute in the opposite direction from where the operator, bystanders, surrounding vehicles, or windows are located.

1. The discharge chute can be controlled 180 degrees by rotating the handle of chute control rod.



WARNING:

Make sure that the chute deflector snaps and locks completely onto the discharge chute. An opening between the discharge chute and the chute deflector may allow foreign objects to be picked up by the snow blower and thrown in the direction of the operator causing serious bodily injury.

- Do not advance the chute deflector too far forward causing an opening to appear between the deflector and discharge chute.
- Do not overtighten the knobs on the chute deflector.

MAINTENANCE



WARNING:

Make sure to turn off the switch and remove the battery pack before performing any maintenance task on your snow blower.

LIFETIME LUBRICATION (MOTOR + AUGER)

Lubrication is not necessary and may damage the unit. The snow blower is lubricated for lifetime use at the factory before shipment.

GENERAL MAINTENANCE TIPS

1. Do not attempt to repair the machine unless you have the proper tools and instructions for disassembly and repair of the machine.
2. Check bolts and screws at frequent intervals for proper tightness to ensure that the equipment is in safe working condition.
3. After each snow removal session, run the snow blower for a few minutes to prevent the collector/impeller from freezing. Shut off the motor, wait for all revolving parts to stop completely, and wipe residual ice and snow off the unit. Rotate the chute deflector by the remote switch several times to remove any excess snow.
4. Only use a cloth soaked with hot water and a soft brush to clean the snow blower; never wet or spray water on the machine!
5. Do not use detergent or solvents as these could cause irreparable damage to the snow blower. Chemicals can destroy the plastic parts.
6. To protect the snow blower from corrosion when storing for long periods, lightly oil the metal parts.
7. Store the equipment in a dry and high or locked area out of the reach of children.
8. For the user's safety, worn or damaged parts must be replaced. Replace with original replacement parts only. Parts from another snow blower may not fit properly causing an unsafe situation.


REPLACING THE AUGER



NOTE:

When replacing worn plastic plates, pay close attention to any different types of bolts and nuts and where they are positioned. This will ensure that the new plastic plates are installed properly and securely.


1. Remove the three screws to disassemble the cover on the right side bracket.

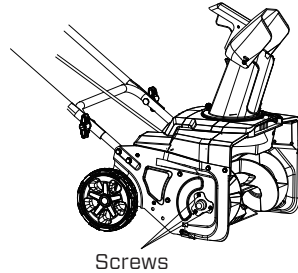

Screws

Fig. 14

2. Disassemble the bracket on the right side by removing the nut.

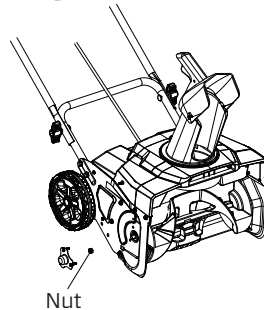

Nut

Fig. 15

3. Remove the five screws to disassemble the cover on the left side.

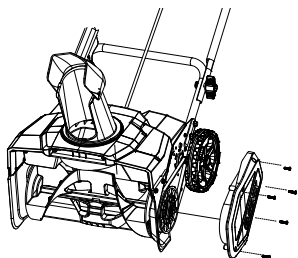


Fig. 16

4. Remove the belt from the pulley.

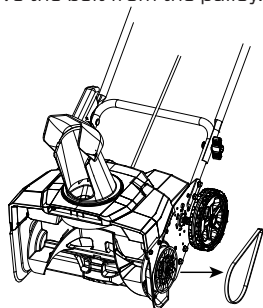


Fig. 17

5. Remove the screw from the pulley.

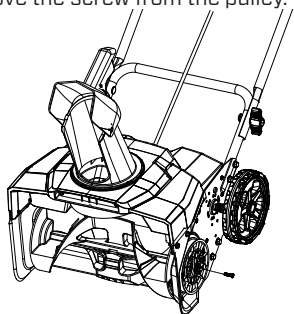


Fig. 18

6. Remove the auger axle set.

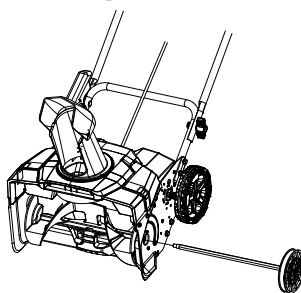


Fig. 19

7. Remove the old auger from the housing.

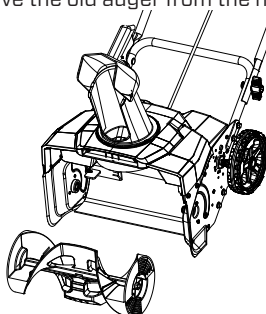


Fig. 20

8. Install the new auger by following the above steps in reverse order.

REPLACING THE SCRAPER BAR

1. The scraper bar is located at the base of the snow blower beneath the rotor housing.
2. Remove the two nuts and two bolts on each side and three screws that secure the guard rod to the snow blower to disassemble the guard rod.

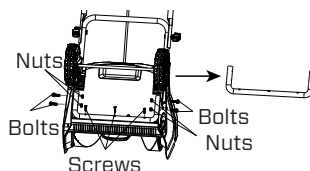


Fig. 21

3. Remove the screws that secure the old scraper bar to the snow blower.

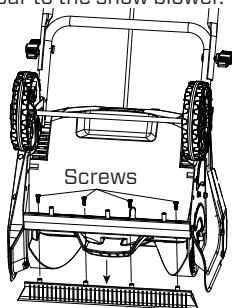


Fig. 22

4. Install the new scraper bar and fasten it securely to the snow blower with the screws.

REPLACING THE BELT



NOTE:

Under normal operating conditions, it should not be necessary to replace the auger belt. However, should the auger jam or malfunction, the belt could be damaged. To replace the belt, follow the instructions.



NOTE:

Determine the left and right hand side of the snow blower by standing behind the unit in the normal operating position.

1. Open the left side plate by removing the five screws.

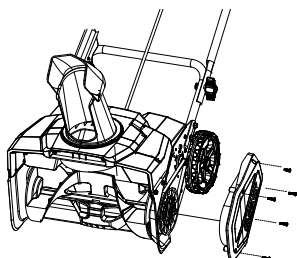


Fig. 23

2. Use your right hand to turn the rib side of the belt up and pull upwards while turning the auger pulley counterclockwise with your left hand. The belt can be easily removed from the pulley.

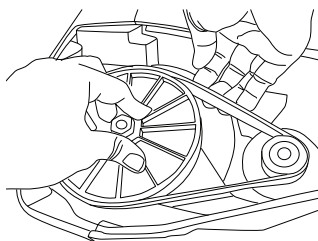


Fig. 24

3. Put the belt on the drive pulley first and then place the belt at the lower end of the auger pulley.

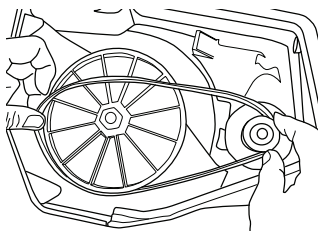


Fig. 25

4. Use your right hand to press the belt with the ribbed side down. While holding the belt down with your right hand, use your left hand to turn the auger forward so that the auger pulley rotates in a clockwise direction. The belt will be gradually pushed down onto the pulley. When the belt is seated on the pulley, adjust it so that the ribs of the belt match the grooves on the pulley.

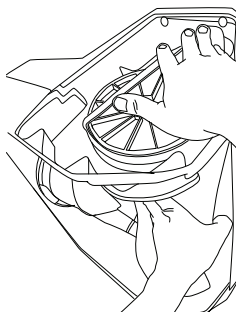


Fig. 26

5. After the belt is installed, replace the side plate and secure it with the five screws.



NOTE:

Heavy wet snow puts more strain on the belts, thus requiring more frequent belt replacement.

CLEANING THE CLOGGED CHUTE

1. Never use your hand to clean out the chute. Failure to follow these instructions can result in serious personal injury.
2. Make 10 seconds to be sure the auger has stopped rotating.
3. Always use a chute clean tool.



NOTE:

Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

TRANSPORTATION

1. Only carry by its handle/grip area.
2. Protect from any heavy impact or strong vibrations which may occur during transportation in vehicles.
3. Secure to prevent it from slipping or falling over.

STORAGE

1. Examine the corded snow blower thoroughly for worn, loose or damaged parts.

2. Allow the motor to cool down before storing.
3. Clean the snow blower before storing or transporting. Be sure to secure the unit while transporting.
4. Store the corded snow blower indoors in a locked, dry place out of the reach of children to prevent unauthorized use or damage.

DISPOSAL

Waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Chips or sawdust may be produced by the tool during operation, users should clean these objects to protect the environment.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

TROUBLESHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The handle wobbles	The knobs are not properly tightened	Tighten the knobs
Product does not start	The snow blower is unplugged	Verify that the snow blower is plugged into an electric outlet
	Ensure proper startup sequence is performed	Press the safety switch button first and then pull the ON/OFF switch lever
	The switch is defective	Contact us at senix.support@yatusa.com
The motor is on, but the auger does not turn	The belt is damaged	Contact us at senix.support@yatusa.com
The snow blower leaves a thin layer snow behind	The scraper is worn	Contact us at senix.support@yatusa.com

WARRANTY

SENIX TOOLS LIMITED WARRANTY

FOR FIVE YEARS from the date of original purchase this power equipment product is warranted against defects in material or construction.

WITH PROOF OF ORIGINAL PURCHASE a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit www.senixtools.com, email senix.support@yatusa.com, or call 1-800-261-3981.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the product to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

60-DAY MONEY-BACK GUARANTEE

If for any reason within 60 days from the date of original purchase you are not completely satisfied with the performance of this SENIX product, you can return it with the original sales receipt for a full refund.

Latin America: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

Free warning label replacement: If your warning labels become illegible or are missing, call 1-800-261-3981 for a free replacement.

REGISTER ONLINE - www.senixtools.com/pages/product-registration

Thank you for your purchase! Register your product now for:

Warranty Service: Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

Confirmation of Ownership: In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

For your safety: Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call 1-800-261-3981 or email us at senix.support@yatusa.com