




21" CORDLESS SNOW BLOWER

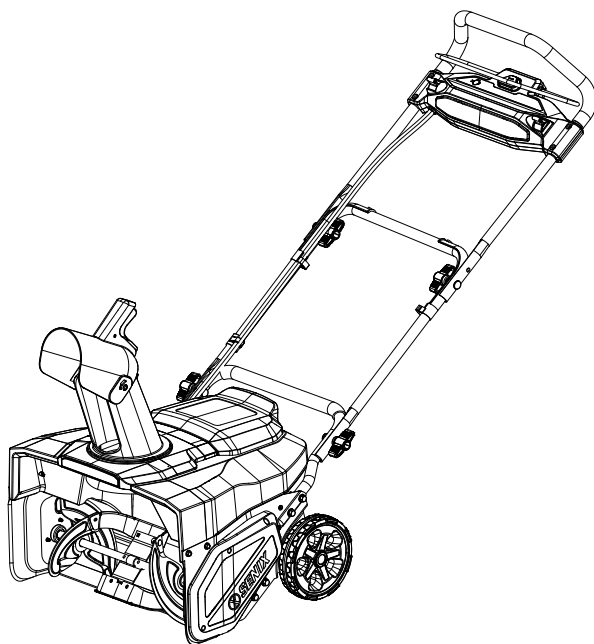

CAUTION: Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call 1-800-261-3981 or email us at senix.support@yatusa.com

TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT.....	6
SPECIFICATIONS.....	7
ASSEMBLY.....	7
OPERATION.....	8
MAINTENANCE.....	11
TROUBLESHOOTING.....	14
WARRANTY.....	15

SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes safety and international symbols and pictographs that may appear on this product. Read, understand, and follow all instructions on the machine and in the instruction manual for complete safety, assembly, operating, maintenance, and repair information before attempting to assemble and operate.



WARNING - To reduce the risk of injury, user must read instruction manual.



SAFETY ALERT - Indicates a precaution, a warning or a danger.



Wear hearing protection. Wear eye protection. Wear breathing protection.



Keep hands, feet and clothing away from the rotating auger to avoid injury.



Wear protective gloves and non-slip footwear when using the machine and handling debris.



Do not use hands to unclog chute.



WARNING! Do not expose the unit to rain or wet conditions. Keep dry.



DANGER! Cutting/dismemberment hazard - Keep feet away from the rotating auger.



CAUTION! Beware of stones and other foreign objects that could be thrown from the equipment.



Keep bystanders and children a safe distance (at least 33 ft/10 m) away from the work area.



DANGER! Cutting/dismemberment hazard - Keep hands away from the rotating auger. Do not use hands to unclog rotor housing. Stop motor before removing debris.



The rotating part will continuously run for several seconds after you turn off the machine.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

SAFETY INSTRUCTIONS

ORIGINAL INSTRUCTIONS IMPORTANT SAFETY INSTRUCTIONS



WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this lawnmower. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

- a. Do not use on graveled surface unless the snow blowers is adjusted for such a surface in accordance with the operator's manual.
 - b. Keep Children Away – All visitors should be kept a safe distance from work area.
 - c. Dress Properly – Do not wear loose clothing or jewelry. They can be caught in moving parts.
 - d. Wear rubber boots when operating the snow blowers.
 - e. Operation of the snow blowers in the hand-held position is unsafe, except in accordance with the special instructions for such use provided in the operator's manual.
 - f. Avoid Accidental Starting – Don't carry plugged-in snow blowers with finger on switch. Be sure switch is off when plugging in.
 - g. If cord is damaged in any manner while plugged in, pull extension cord from wall receptacle.
 - h. Keep hands away from moving parts.
 - i. Keep guards in place and in working order.
 - j. Don't Force Snow Blowers – It will perform better and safer at the rate for which it was designed.
 - k. Don't Overreach – Keep proper footing and balance at all times.
 - l. If the snow blowers strikes a foreign object follow these steps:
 - i) Stop snow blowers. Release the switch.
 - ii) Remove the battery pack.
 - iii) Inspect for damage.
 - iv) Repair any damage before restarting and operating the snow blowers.
 - m. Store Idle Snow Blowers Indoors – When not in use, snow blowers should be stored indoors in dry, locked-up place – out of reach of children.
- n. Maintain Snow Blowers With Care – Follow instructions for lubricating and changing accessories.

GENERAL REQUIREMENTS FOR BATTERY-POWERED APPLIANCES

- a. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- b. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- c. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- d. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- e. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- f. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. (This advice is considered correct for conventional NiMh, NiCd, lead acid and lithium-ion cell types. If this advice is incorrect for a cell design that differs from these, then the correct advice may be substituted.)
- g. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- h. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to

- fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
- i. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

SAFE OPERATION PRACTICES FOR PEDESTRIAN -CONTROLLED SNOW BLOWER

General

This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury.

Training

- a. Read, understand and follow all instructions on the machine and in the manual(s) before operating this unit. Be thoroughly familiar with the controls and the proper use of the machine. Know how to stop the unit and disengage the controls quickly.
- b. Never allow children to operate the machine. Never allow adults to operate the machine without proper instruction.
- c. Keep the area of operation clear of all persons, particularly small children.
- d. Exercise caution to avoid slipping or falling, especially when operating the machine in reverse.

Preparation

- a. Thoroughly inspect the area where the machine is to be used and remove all doormats, sleds, boards, wires and other foreign objects.
- b. Do not operate the machine without wearing adequate winter garments. Avoid loose fitting clothing that can get caught in moving parts. Wear footwear that will improve footing on slippery surfaces.
- c. Adjust the collector housing height to clear gravel or crushed rock surface.
- d. Never attempt to make any adjustments while the motor is running (except when specifically recommended by

manufacturer).

- e. Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect eyes from foreign objects that may be thrown from the machine.

Operation

- a. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- b. Exercise extreme caution when operating on or crossing gravel drives or walks. Stay alert for hidden hazards or operating near public roads.
- c. After striking a foreign object, stop the motor, remove the battery, thoroughly inspect the snow thrower for any damage, and repair the damage before restarting and operating the snow blower.
- d. If the machine should start to vibrate abnormally, stop the motor and check immediately for the cause. Vibration is generally a warning of trouble.
- e. Stop the motor whenever you leave the operating position, before unclogging the collector/impeller housing or discharge chute, and when making any repairs, adjustments or inspections.
- f. Exercise extreme caution when operating on slopes.
- g. Never operate the machine without proper guards and other safety protective devices in place and working.
- h. Never direct the discharge toward people or areas where property damage can occur. Keep children and others away.
- i. Do not overload the machine capacity by attempting to clear snow at too fast a rate.
- j. Never operate the machine at high transport speeds on slippery surfaces. Look behind and use care when operating in reverse.
- k. Disengage power to the collector/impeller when the machine is transported or not in use.
- l. Use only attachments and accessories approved by the manufacturer of the machine (such as wheel weights, counterweights or cabs).
- m. Never operate the machine without good visibility or light. Always be sure of your footing, and keep a firm hold on the handles. Walk; never run.

Clearing a clogged discharge chute

- a. Hand contact with the rotating impeller

inside the discharge chute is the most common cause of injury associated with snow throwers. Never use your hand to clean out the discharge chute.

- b. To clear the chute:
 - 1. SHUT THE MOTOR OFF!
 - 2. Wait 10 s to be sure the impeller blades have stopped rotating.
 - 3. Disconnect the battery before cleaning or inspecting the auger.
 - 4. Always use a clean-out tool, not your hands.

Maintenance and storage


- a. Check shear bolts and other bolts at frequent intervals for proper tightness to be sure the equipment is in safe working condition.
- b. Always refer to instruction handbook for important details if the snow thrower is to be stored for an extended period.
- c. Maintain or replace safety labels, as necessary.
- d. Run the machine a few minutes after throwing snow to prevent freeze-up of the collector/impeller.

SAVE THESE INSTRUCTIONS

INTENDED USE

This cordless snow blower is intended for removing and clearing away snow from sidewalks, driveways and other paved surfaces. Do not use it for other purposes.

KNOW YOUR UNIT

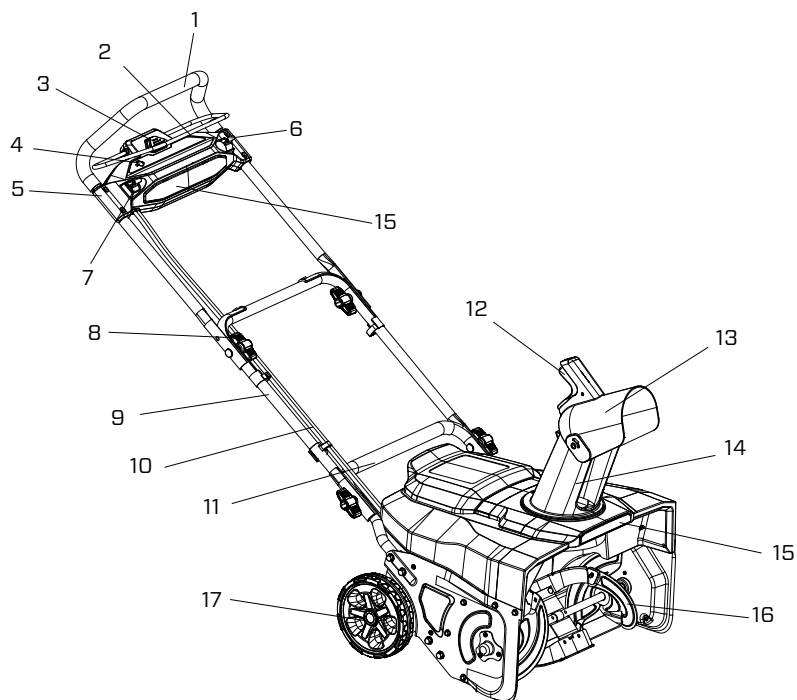

APPLICATIONS

Model: STX2-M1

As a cordless snow blower:
Removing and clearing away snow from paved surfaces.

1	Upper Handle
2	Starter Lever
3	Power Button
4	LED Lights Button
5	Switch Box
6	Speed Aadjustment Button
7	Chute Adjustment Button

8	Handle Assembly Knob
9	Middle Handle
10	Power Cord
11	Lower Handle
12	Trigger
13	Chute Deflector
14	Discharge Chute
15	LED Light
16	Auger Assembly
17	Wheel

SPECIFICATIONS

Model	STX2-M1
Input Voltage	36 V $\equiv$ (40 V $\equiv$ MAX*)
Rated Output	1 800 W
Maximum Runtime (2x 5.0Ah Batteries)	15 min
Snow Clearing Width	21"
Max Snow Throwing Distance	33 ft
Max Plow Depth	12"
Max Clearing Capacity	660 lbs/min
No-Load Auger Speed	1 400 - 1 800 RPM
Weight (Tool Only)	36 lbs

*40V Max battery, maximum initial battery voltage (measured without a workload) is 40V. The nominal voltage is 36V.



NOTE:

Only use the following batteries: B20X2, B25X2, B40X2, B50X2, B80X2 and chargers: CHX2, CHQX2, CHQX2-M, CHDX2-M.

ASSEMBLY

1. Unpack all parts and lay them on a flat, stable surface:
 2. Remove all packing materials and shipping devices, if applicable.
 3. The scope of delivery varies depending on the country and purchased variant.
- Square neck bolt x4
 - Handle knob x4
 - Discharge chute knob x1
 - Cord clip x1
 - Middle handle x1
 - Discharge chute x1
 - Snow blower x1
 - Instruction manual x1

4. If parts are missing or damaged, do not use the product. Contact your local dealer.
5. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING!



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling.

Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!

Do not insert the battery packs before the power tool is completely assembled or adjusted!



WARNING!

To avoid product damage or personal injury, the equipment should be assembled indoors at an ambient temperature above 23°F (-5°C).

ASSEMBLING

For easy assembly, the snow blower comes equipped with most of the parts already connected. In just a few simple steps, your snow blower will be ready to go.

1. Secure the connection of the middle handle to the lower handle using 2 handle knobs and 2 bolts and tighten them on each side.

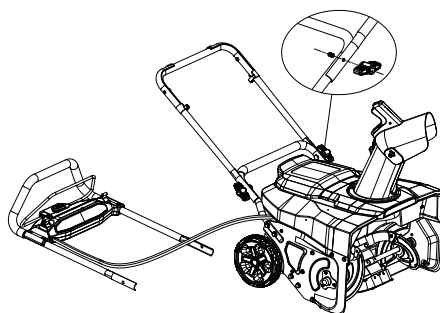


Fig. 1

2. Secure the connection of the middle handle assembly to the upper handle assembly using 2 handle knobs and 2 bolts and tighten them on each side.

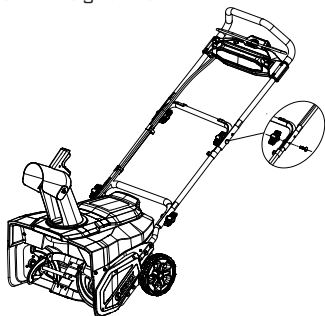


Fig. 2

3. Align the pilot hole "I" on the discharge chute with the sign "C" on the chute housing. Rotate the discharge chute in the direction indicated by the arrow on the chute housing until it is aligned with the sign "C". Push the discharge chute into position and tighten the discharge chute screws to lock the discharge chute.

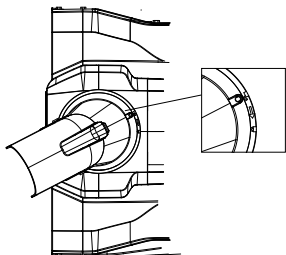


Fig. 3

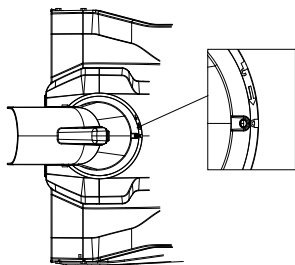


Fig. 4

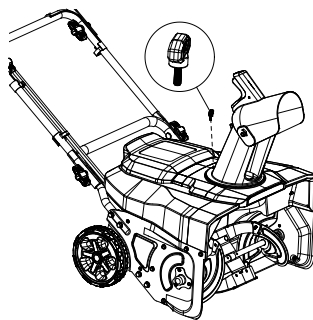


Fig. 5

4. Use the cord clip to secure the cord.

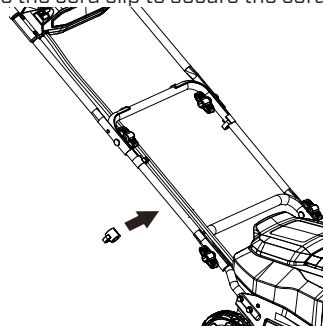


Fig. 6



WARNING!

Make sure that the chute deflector snaps and locks completely onto the discharge chute. An opening between the discharge chute and the chute deflector may allow foreign objects to be picked up by the machine and thrown in the direction of the operator causing serious personal injury.

OPERATION



WARNING:

Keep the area to be cleared free of stones, toys or other foreign objects that the auger might pick up and throw. Such items could be covered by snow and are easy to overlook, so be sure to conduct a thorough inspection of the area before beginning work.

INSTALLING OR REMOVING THE BATTERY PACK



WARNING:

Charge the battery packs before first use.

1. Raise the battery compartment cover by lifting the front of the cover.
2. Align the grooves in the battery packs with the raised ribs in the battery compartment and then insert the battery packs into the compartment until you hear a “click”.
3. To detach the battery packs, depress the battery-release button to release the battery packs, and then lift them out of the compartment.
4. Close the battery compartment cover.

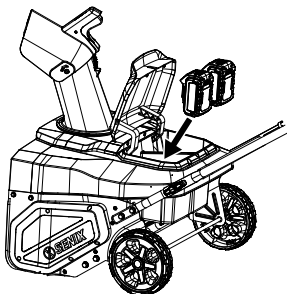


Fig. 7



NOTE :

Refer to the manuals for the charger and the battery pack for more details about how to charge the battery pack and other information.

STARTING AND STOPPING

To start:

While depressing the power button, pull the starter lever toward you. Once the machine powers on, release the power button and begin operation. The machine can only be started by depressing the power button first and then squeezing the starter lever; reverse operation will not start the machine.

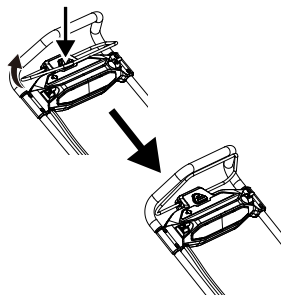


Fig. 8

To stop:

To power off, release your grip on the starter lever.

OPERATING TIPS



WARNING:

Foreign objects, such as rocks, broken glass, nails, wire, or string, can be picked up and thrown by the snow blower, causing serious personal injury. Remove all foreign objects from the area to be plowed before operating the snow blower.

1. Keep the area of operation free of foreign objects that can become thrown by the rotor blades. Perform a thorough inspection of the area since some objects may be hidden from view by surrounding snow. If the snow blower hits an obstruction or picks up a foreign object during use, stop the snow blower, remove the obstruction, and inspect the unit for damage. Repair or replace any damaged part before restarting and operating the unit.
2. Keep children, pets, and bystanders away from the area of operation. Be aware that the normal noise of the machine when turned on may make it difficult for you to hear approaching people.
3. When moving the snow blower, use the wheels on one side as the pivot point. Slightly tilt the snow blower on this pivot point to move it forward or backward.
4. Start your clearing path outward, throwing snow in a back and forth motion. To clear in the opposite direction, pivot the snow blower on its wheels. Make sure to overlap clearing paths.

5. Note the wind direction. If possible, move in the same direction as the wind so that the snow is not thrown against the wind (and thus back into your face and on the just cleared path).
6. Do not push the snow blower with excessive force. You should push the machine gently and evenly in accordance with the unit's throw rate.
7. Do not apply additional man-made load to the motor since this may cause motor damage.
8. Some parts of the snow blower may freeze under extreme temperature conditions. Do not attempt to operate the snow blower with frozen parts. If the parts freeze while the snow blower is in use, stop the snow blower and inspect for frozen parts. Free all parts before restarting or operating the snow blower. Never force controls that have frozen.
9. When working on pebbles, gravel, or unpaved surfaces, avoid throwing loose surface material along with the snow by pushing down on the handle to raise the scraper at the base of the unit above the pebbles or gravel.

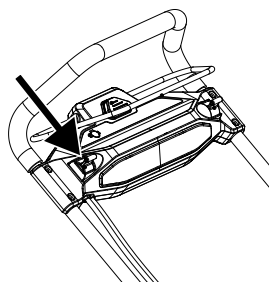


Fig. 8

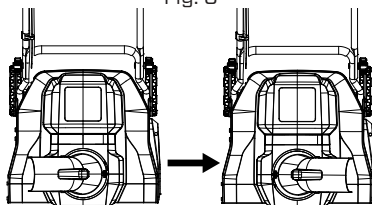


Fig. 9

2. The throw speed can be adjusted by pushing the speed adjustment button.

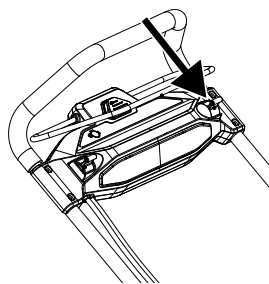


Fig. 10

CHANGING THROW DIRECTION + THROW SPEED+THROW HEIGHT



WARNING:

Never direct the snow discharge chute at the operator, bystanders, vehicles, or nearby windows. The discharged snow and foreign objects accidentally picked up and thrown by the snow blower can cause serious personal injury. Always orient the discharge chute in the opposite direction from where the operator, bystanders, surrounding vehicles, or windows are located.

1. The discharge chute can be controlled 180 degrees by pushing the chute adjustment button.

3. The chute deflector on the top of the discharge chute controls the height of the snow stream. Squeeze the trigger to raise or lower the deflector to the desired height of snow you wish to throw.

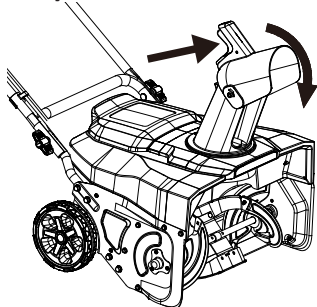


Fig. 11

LED LIGHTS

The LED lights on the front of the housing can illuminate the road for the machine in a dark area. To turn on the LED lights, press down the light button.

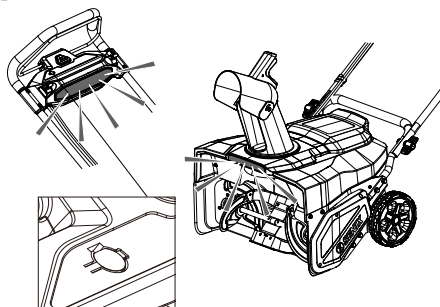


Fig. 12

MAINTENANCE



WARNING:

Always switch the product off, remove the battery packs from the product and let the product cool down before performing any cleaning and maintenance work!



WARNING:

Only perform cleaning and maintenance work according to these instructions! All further works must be performed by a qualified specialist! And only use specified spare parts for replacement.



WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.

GENERAL MAINTENANCE TIPS

1. Do not attempt to repair the machine unless you have the proper tools and instructions for disassembly and repair of the machine.
2. Check bolts and knobs at frequent intervals for proper tightness to ensure that the equipment is in safe working condition.
3. After each snow removal session, run the snow blower for a few minutes to prevent the impeller from freezing. Shut off the motor, wait for all revolving parts to stop completely, and wipe residual ice and snow off the unit. Rotate the chute deflector several times to remove any excess snow.
4. Only use a cloth soaked with hot water and a soft brush to clean the snow blower; never wet or spray water on the machine!
5. Do not use detergent or solvents as these could cause irreparable damage to the snow blower. Chemicals can destroy the plastic parts.
6. To protect the snow blower from corrosion when storing for long periods, lightly oil the metal parts.
7. Store the equipment in a dry and high or locked area out of the reach of children.
8. For the user's safety, worn or damaged parts must be replaced. Replace with

original replacement parts only. Parts from another snow blower may not fit properly causing an unsafe situation.

REPLACING THE SCRAPER BAR

1. The scraper bar is located at the base of the snow blower beneath the rotor housing.
2. Remove the two nuts and two bolts on each side and three screws that secure the guard rod to the snow blower to disassemble the guard rod.
3. Remove the screws that secure the old scraper bar to the snow blower.
4. Install the new scraper bar and fasten it securely to the snow blower with the screws.

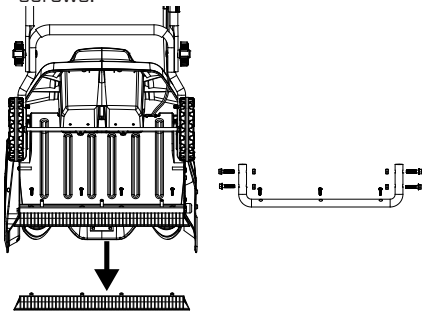


Fig. 13

REPLACING THE BELT



NOTE:

Under normal operating conditions, it's unnecessary to replace the auger belt. But the belt could be damaged if the auger is jammed or malfunctioned. To replace the belt, follow the instructions.



NOTE:

Determine the left and right hand side of the snow blower by standing behind the unit in the normal operating position.

1. Remove the five screws to open the left side plate.

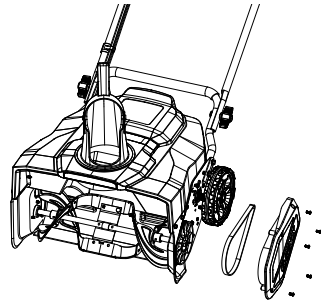


Fig. 14

2. Use your right hand to turn the rib side of the belt up and pull upwards while turning the auger pulley counterclockwise with your left hand. The belt can be easily removed from the pulley.

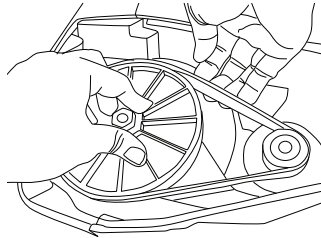


Fig. 15

3. Put the belt on the drive pulley first and then place the belt at the lower end of the auger pulley.

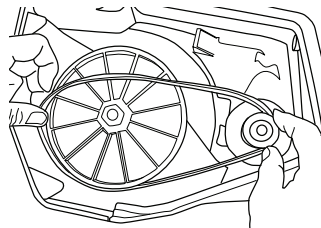


Fig. 16

4. Use your right hand to press the belt with the ribbed side down. While holding the belt down with your right hand, use your left hand to turn the auger forward so that the auger pulley rotates in a clockwise direction. The belt will be gradually pushed down onto the pulley. When the belt is seated on the pulley, adjust it so that the

ribs of the belt match the grooves on the pulley.

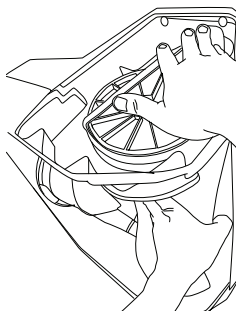


Fig. 17

5. After the belt is installed, replace the side plate and secure it with the five screws.



NOTE:

Heavy wet snow puts a load on belts, thus requiring more frequent belt replacement.

CLEANING THE CLOGGED CHUTE

1. Never use your hand to clean out the chute. Failure to follow these instructions can result in serious personal injury.
2. Make 10 seconds to be sure the auger has stopped rotating.
3. Remove the battery from the tool before touching the auger.
4. Always use a chute clean tool.

LIFETIME LUBRICATION

Lubrication is not necessary and may damage the product. The snow blower is lubricated for lifetime use at the factory before shipment.

CLEANING

1. Switch the product off, remove the battery packs from the machine and allow the motor to cooldown.
2. Inspect the product before and after each use for worn and damaged parts. Do not operate it if you find worn and damaged parts.
3. Use a small brush to clean the outside of the product. Do not use strong detergents.

Household cleaners that contain aromatic oils such as pine and lemon, and solvents such as kerosene, can damage plastic. Wipe off any moisture with a soft cloth.

STORAGE

1. Examine the product thoroughly for worn, loose or damaged parts.
2. Clean the product described earlier.
3. Store the product in a cool, dry, and well-ventilated place.

TRANSPORTATION

1. Clean the product as described above.
2. Only carry by its handle/grip area.
3. Protect from any heavy impact.
4. Secure the product properly.

DISPOSAL

Product should not be disposed of with household waste. Please recycle where facilities exist.

Check with your local authority or retailer for recycling advice. Users should clean up dust generated during operation to protect environment.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

TROUBLESHOOTING

Suspected malfunctions are often due to causes that can be addressed by the user. Therefore, troubleshoot the product using this section. In most cases the problem can be solved quickly.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The handle is not in position.	The handle is not installed properly.	Make sure the bolts are correctly installed through the handle bars. Check to see if the hand knobs are tight. Refer to this manual to assemble the handle.
Product does not start.	Battery packs are discharged.	Charge the battery packs.
	Battery packs are too cold.	Remove the battery packs from the product. Place the battery packs on charger and allow them to charge for 10 minutes. Remove the battery packs from charger and reinstall them in for use.
	The battery packs are not attached to the motor.	Check the connection between the motor connector and the battery packs.
	Battery packs are damaged.	Replace with new battery packs.
	The switch is defective.	Replace with a new one.
	The auger is jammed.	Unplug from power supply, inspect auger, remove debris.
The motor is on, but the auger does not turn.	The belt is damaged.	Replace with a new one.

WARRANTY

SENIX TOOLS LIMITED WARRANTY

FOR FIVE YEARS from the date of original purchase this product is warranted against defects in material or workmanship. **WITH PROOF OF ORIGINAL PURCHASE** a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit **senixtools.com**, email **senix.support@yatusa.com** or call **1-800-261-3981**.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover an included battery pack or charger, which offer three-year, replacement-only coverage. See battery pack or charger instruction manuals for complete warranty details.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to drill bits, cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the power tool to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

NOTE: Battery pack warranty voided if the battery pack is tampered with in any way. SENIX is not responsible for any injury caused by tampering and may prosecute warranty fraud to the fullest extent permitted by law.

60-DAY MONEY-BACK GUARANTEE. If for any reason within 60 days from the date of original purchase you are not completely satisfied with the performance of this SENIX product, you can return it with the original sales receipt for a full refund.

Latin America: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

Free warning label replacement: If your warning labels become illegible or are missing, call **1-800-261-3981** for a free replacement.

REGISTER ONLINE - senixtools.com/pages/product-registration

Thank you for your purchase! Register your product now for:

Warranty Service: Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

Confirmation of Ownership: In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

For your safety: Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078

For customer support, please call **1-800-261-3981** or email us at **senix.support@yatusa.com**